

# Endo Motor Instruction Manual

Please read this manual before operating



[www.glwoodpecker.com](http://www.glwoodpecker.com)

**GUILIN WOODPECKER MEDICAL INSTRUMENT CO., LTD.**

<https://stomshop.pro>

## Contents

1 Product introduction.....	1
2 Installation .....	6
3 Function and operation of product .....	13
4 Operation instruction .....	16
5 Troubleshooting .....	30
6 Cleaning, Disinfection and Sterilization .....	31
7 Storage, maintenance and transportation .....	34
8 Environmental protection .....	35
9 After service .....	35
10 Symbol instruction .....	35
11 Statement .....	36
12 EMC-Declaration of conformity.....	36

# **1 Product introduction**

## 1.1 Preface

Guilin Woodpecker Medical Instrument Co., Ltd is a professional manufacturer researching, developing, and producing dental products. Woodpecker owns a sound quality control system. Guilin Woodpecker Medical Instrument Co., Ltd has two brands, Woodpecker and DTE. Its main products include Ultrasonic Scaler, Curing light, Apex locator, Ultrasurgery, Endo Motor, etc.

## 1.2 Product description

Endo Motor (mode: Ai-Motor、MotoPex) is mainly used in Endodontic treatment. It is a cordless endo motor with root canal measurement capability. It can be used as a endo motor for preparation and enlargement of root canals, or device for measuring canal length. It can be used to enlarge the canals while monitoring the position of the file tip inside the canal.

Features:

- a) Efficient brushless motor, low noise, long service life.
- b) Cordless portable endo motor with combined length determination.
- c) 360 degrees rotation of contra angle.
- d) Adopt real-time feedback technology and dynamic torque control, effectively preventing file separation.

## 1.3 Model and specification


Ai-Motor、MotoPex

Please refer to packing list for device configurations.


## 1.4 Performance and composition

The device is composed of charging base, motor handpiece, contra angle, measuring wire, lip hook, file clip, power adapter, protective silicon cover, etc.

# Ai-Motor

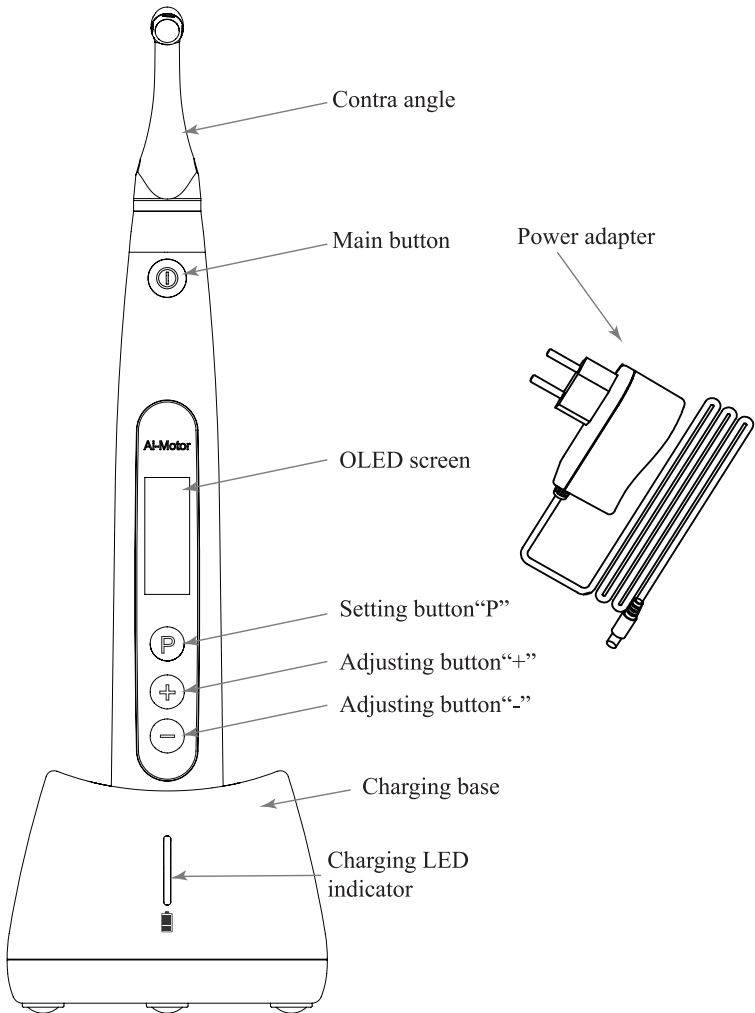

# MotoPex

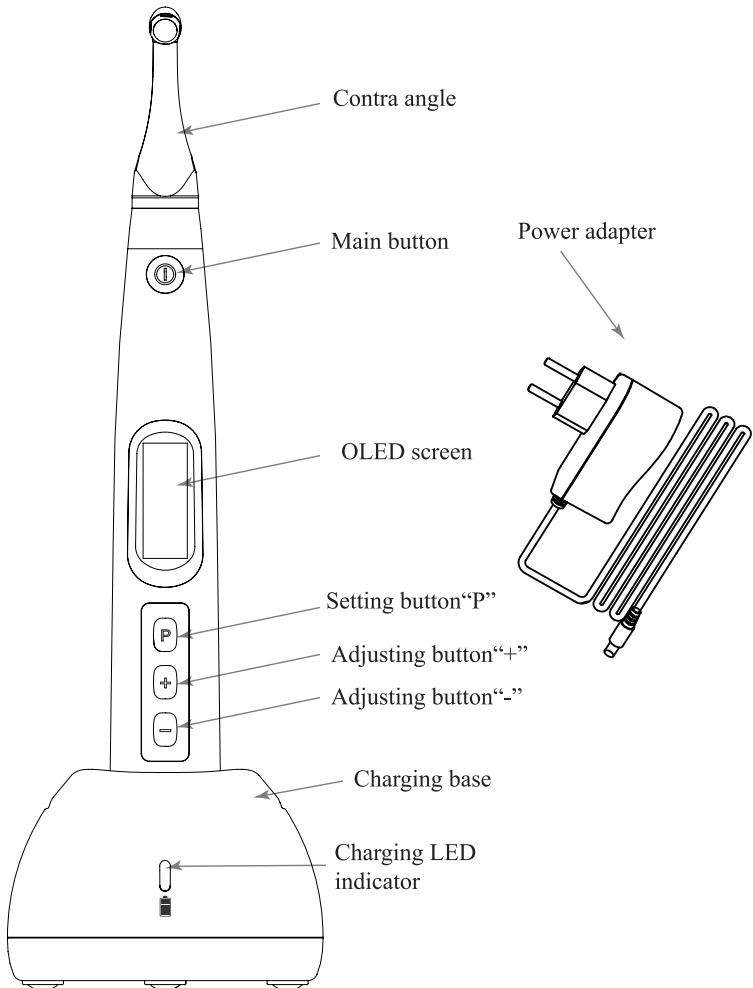

## 1.5 Scope of application

1.5.1 The device can be used for preparation and enlargement of root canals, or device for measuring canal length.

1.5.2 The device must be operated in hospital and clinic by the qualified dentists.

## 1.6 Contraindication

a) The doctor with a pacemaker is disabled.

b) patients with cardiac pacemakers (or other electrical equipment) are warned not to use small appliances (such as Electric razors, hair dryers, etc.) patients are disabled.

c) Hemophilia patients are banned.

d) Use with caution in patients with heart disease, pregnant women and young children.

## 1.7 Warnings

1.7.1 Please carefully read this Instruction Manual before first operation.

1.7.2 This device should be operated by professional and qualified dentist in qualified hospital or clinic.

1.7.3 Do not directly or indirectly place this device near heat source. Operate and store this device in reliable environment.

1.7.4 This device requires special precautions regarding electromagnetic compatibility (EMC) and must be in strict accordance with the EMC information for installation and use. Do not use this equipment especially in the vicinity of fluorescent lamps, radio transmitting devices, remote control devices, handheld and mobile high-frequency communication devices.

1.7.5 Long time use of Reciprocating Motion Mode may result in motor handpiece overheat, thus it should be left to cool for use. If the motor handpiece is overheated frequently, please contact local distributor.

1.7.6 Please use the original contra angle. Otherwise it will not be used or cause adverse consequences.

1.7.7 Please do not make any changes to the device. Any changes may violate safety regulations, causing harm to the patient. There will be no promises of any modification.

1.7.8 Please use original power adapter. Other power adapter will result in damage to lithium battery and control circuit.

1.7.9 The motor handpiece cannot be autoclaved. Use disinfectant of neutral pH value or ethyl alcohol to wipe its surface.

1.7.10 Before the contra angle stopping rotating, do not press the push cover of contra angle. Otherwise the contra angle will be broken.

1.7.11 Before the motor handpiece stopping rotating, do not remove the contra angle. Otherwise the contra angle and the gear inside motor handpiece will be broken.

1.7.12 Please confirm whether the file is well installed and locked before starting the motor handpiece.

1.7.13 Please set torque and speed as per the recommended specifications of file manufacturer.

1.7.14 Error in replacing lithium batteries can lead to unacceptable risks, so use the original lithium battery and replace the lithium battery according to the correct steps in the instructions.

1.7.15 Not to position equipment to make it difficult to operate the disconnection device.

1.7.16 Please remove the battery if the motor handpiece is not likely to be used for some time.

## 1.8 Device safety classification

1.8.1 Type of operation mode: Continuous operating device

1.8.2 Type of protection against electric shock: Class II equipment with internal power supply

1.8.3 Degree of protection against electric shock: B type applied part

1.8.4 Degree of protection against harmful ingress of water: Ordinary equipment (IPX0)

1.8.5 Degree of safety application in the presence of a flammable anesthetic mixture with air, oxygen, or nitrous oxide: Equipment cannot be used in the presence of a flammable anesthetic mixture with air, oxygen, or nitrous oxide.

1.8.6 Applied part: contra angle, lip hook, file clip, touch probe.

1.8.7 The contact duration of applied part: 1 to 10 minutes.

1.8.8 The temperature of the surface of applied part may reach 46.6°C.

## 1.9 Primary technical specifications

1.9.1 Battery

Lithium battery in motor handpiece: 3.7V /2000mAh

1.9.2 Power adapter:

Input: ~100V-240V 50Hz/60Hz 400mA Max

Output: DC5V/1A

1.9.3 Torque rang: 0.4Ncm-5.0Ncm (4mNm ~ 50mNm)

1.9.4 Speed rang: 100rpm~1200rpm

## 1.10 Environment parameters

1.10.1 Environment temperature: +5°C ~ +40°C

1.10.2 Relative humidity: 30% ~ 75%

1.10.3 Atmospheric pressure: 70kPa ~ 106kPa

## 2 Installation


### 2.1 Basic accessories of product




Motor handpiece




Contra angle

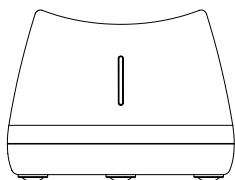

Ai-Motor Charging base

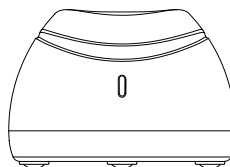


MotoPex Charging base



Nozzle




Protective silicon cover

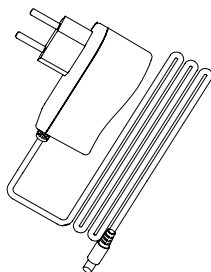


Power adapter





Measuring wire

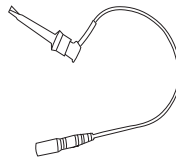

File clip



Lip hook




Touch probe

## 2.2 Display Screens

### 2.2.1 Display Screens for 5 Operation Modes and Standby


#### 2.2.1.1 EAL Mode

This mode is for canal measurement. The motor handpiece does not run in this mode.




#### 2.2.1.2 CW Mode

The motor handpiece rotates forward 360°, clockwise direction. Used rotaty files likes DENTSPLY Protaper or WOODPECKER W3-Pro.



#### 2.2.1.3 CCW Mode


The motor handpiece rotates counterclockwise direction only. This mode is used to inject calcium hydroxide and other medicant. When this mode is being used, a double-beep sounds continuously.



#### 2.2.1.4 REC Mode

Reciprocating mode.

F: Forward angle, R: Reverse angle



Adjustable every 10 degrees, adjustment range: 20°-340°.

It is suggested that the difference between the forward angle and reverse angle should be greater than or equal to 120 degrees, otherwise, root canals cannot be prepared effectively.

Forward Angle < Reverse Angle, such as F: 30/R: 150, effective cutting angle is Reverse Angle, it is suitable for used the reciprocating files likes DENTSPLY WAVEONE or WOODPECKER W3-ONE.


Forward Angle > Reverse Angle, such as F: 180/R: 30, effective cutting angle is Forward Angle, it is suitable for used the reciprocating files likes SENDONELINE S1.

Torque limit: 2.0Ncm~5.0Ncm

Speed: 100rpm, 150rpm, 200rpm, 250rpm, 300rpm, 350rpm, 400rpm, 450rpm, 500rpm.

#### 2.2.1.5 ATR Mode

ATR: Adaptive Torque Reverse function.




Normal continuous forward rotation, the forward angle can be stepped by 10°, the angle is set between 120°-340°, and the reverse angle defaults to 90°. When the load of the file is greater than the set torque limit, the file will start to rotate alternately at the set angle.

Trigger torque: 0.4Ncm, 0.6Ncm, 0.8Ncm, 1Ncm, 1.2Ncm, 1.5Ncm

Speed: 100rpm, 150rpm, 200rpm, 250rpm, 300rpm, 350rpm, 400rpm, 450rpm, 500rpm


#### 2.2.2 Torque Display

This appears when the motor is running. Meter shows the torque load on the file.

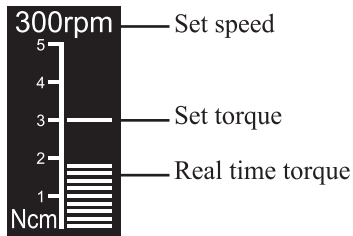

### 2.2.3 Canal Measurement Display

This appears when a file is inside the canal and the lip hook is contacting the patient mouth. Bars in meter show the location of the file tip.



The meter numbers 1.0, 2.0, 3.0 and digital numbers 00-16 do not represent the actual length from the apical foramen. It simply indicates the file progression towards the apex. The digital numbers -1 and -2 indicate that the file has passed the apex foramen. The digital number “00” indicate that the file has reached the apex foramen. Subtract 0.5-1mm from the measured file length as the working length. These numbers are used to estimate the canal’s working length.

## 2.3 Instructions for contra angle

2.3.1 The contra angle adopts precision gear transmission, and the transmission ratio is 6:1.


2.3.2 Before the first use and after treatments, please clean and disinfect contra angle with disinfectant of neutral PH value. After disinfection, lubricate it with specific cleaning oil. Finally, sterilize it under high temperature and high pressure (134°C, 2.0bar~2.3bar (0.20MPa~0.23MPa)).

2.3.3 The contra angle can only be used cooperatively with this device. Otherwise the contra angle will be damaged.


## 2.4 Installation and removal of contra angle.

### 2.4.1 Installation

Line up the notch inside the contra angle with the projection inside the motor handpiece and slide it in until it clicks securely into place.

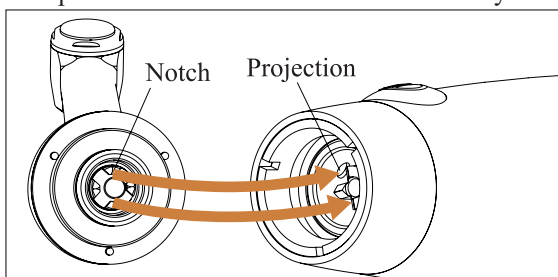


The contra angle rotates 360° so that the OLED display can always be viewed easily.

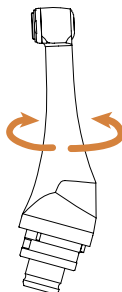

### 2.4.2 Removal

Pull out the contra angle horizontally when the motor handpiece does not run.



#### **Warnings:**

- Before plugging in or pulling out contra angle, please first stop the motor handpiece.
- After installation, please check and confirm that the contra angle has been well installed.

## 2.5 Installation and removal of file


### 2.5.1 Installation of file

Before starting the device, plug the file into the hole of contra angle

head.

Hold down the push button on the contra angle and insert the file. Turn the file back and forth until it is lined up with interior latch groove and slips into place. Release the button to lock the file into the contra angle.

Push Button

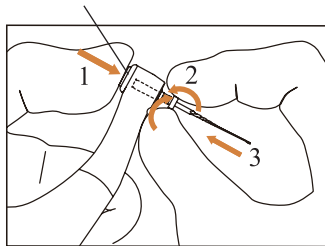

**⚠ Warnings:**

After plugging the file into contra angle, let go the hand on push cover to assure that the file cannot be taken out.


Be careful when inserting files to avoid injury to fingers.

Inserting and removing files without holding the push button may damage the chuck of contra angle.

Please use files with shanks meet the ISO standard. (ISO standard: Ø2.334 – 2.350 mm)

**2.5.2 Removal of file**

Pressing the push cover, and then directly pull out the file.

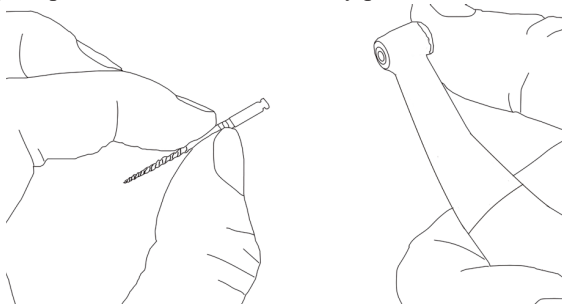

**⚠ Warnings:**

Before plugging and pulling out the file, the motor handpiece must be stopped.

Be careful when removing files to avoid injury to fingers.


Removing files without holding the push button will damage the chuck of contra angle.

## 2.6 Canal measurement functional connection

This is not required if the canal measurement function will not be used.

Connect the measuring wire to the motor handpiece. Line up the measuring wire plug with the notch on the back of the motor and push it all the way in.

Connect the file clip plug into the socket (black) on the measuring wire. Connect the lip hook to the socket (white) on the measuring wire.

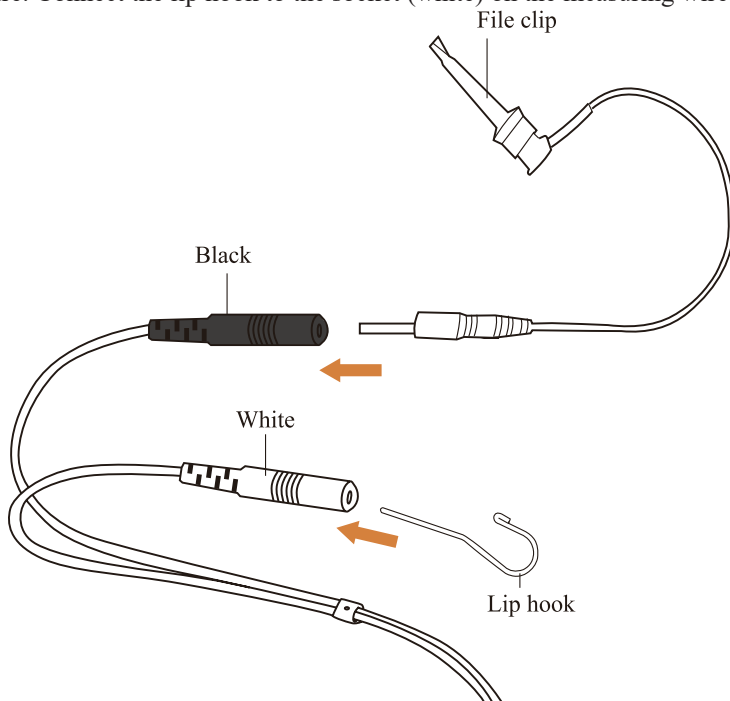


### **Warnings:**

Connect the lip hook to the socket (white) on the measuring wire. Otherwise, the function of root canal preparation and root canal length

measurement cannot be used together.

### 3 Function and operation of product

#### 3.1 Button definition and settings

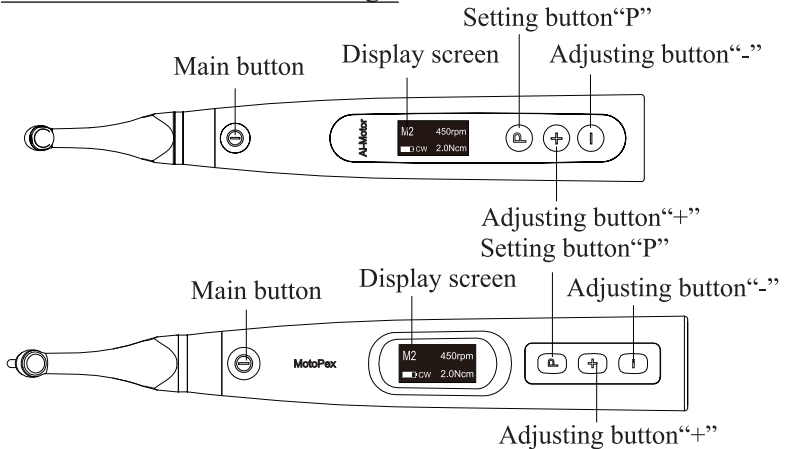

a. Turn power on

Press Main button to turn on motor handpiece.

b. Turn power off

Hold down the Setting button "P", then press Main button to turn off motor handpiece.

c. Customized program change

Press Adjusting button "+"/"-" during standby state.

d. Parameter setting

Press Setting button "P" till target parameters, press Adjusting button "+"/"-" to change, then press Main button or wait 5 seconds to confirm.

e. Preset program selection

Long press Setting button "P" to entry preset program during standby state, press Adjusting button "+"/"-" to select file system , press Setting button "P" to entry select file number, press Adjusting button "+"/"-" to select file number, then press Main button to confirm.

f. Handpiece functions setting


With the motor handpiece turned off, hold down the Setting button "P" and press Main button to entry handpiece functions setting, press Setting button "P" till target setting, press Adjusting button "+"/"-" to adjust,

then press Main button to confirm.

### 3.2 Screen display

<p>The image shows a black rectangular screen with white text. At the top left, it says 'M0' and '250rpm'. Below that, on the left, is a battery icon and the text 'CW 2.0Ncm'. A small white bar is next to the battery icon. Labels 'a', 'b', 'c', 'd', and 'e' are placed around the screen with lines pointing to specific parts: 'a' points to 'M0', 'b' points to the battery icon, 'c' points to '250rpm', 'd' points to '2.0Ncm', and 'e' points to the battery bar.</p>	<p>Standby interface</p> <ul style="list-style-type: none"> <li>a. Customized program sequence number 0-9, totally 10 programs.</li> <li>b. Battery consumption</li> <li>c. Set speed</li> <li>d. Set torque</li> <li>e. Operation mode</li> </ul>
<p>The image shows a black rectangular screen with white text and graphics. On the left, it says '300rpm' and has a vertical scale with numbers 5, 4, 3, 2, 1. On the right, it says 'Ncm' and has a horizontal bar chart with vertical lines of varying heights. Labels 'a', 'b', 'c', and 'd' are placed around the screen: 'a' points to '300rpm', 'b' points to the vertical scale, 'c' points to the bar chart, and 'd' points to the 'Ncm' label.</p>	<p>Working interface</p> <ul style="list-style-type: none"> <li>a. Set speed</li> <li>b. Set torque</li> <li>c. Real time torque</li> <li>d. Torque display scale</li> </ul>
<p>The image shows a black rectangular screen with white text and graphics. At the top left, it says 'M0'. Below that, there is a bar chart with vertical lines of varying heights. Below the bar chart, it says 'AP' and has numbers 1, 2, 3. At the bottom, it says 'EAL' and has a battery icon. Labels 'a' and 'b' are placed around the screen: 'a' points to the bar chart, and 'b' points to the 'EAL' text.</p>	<p>Canal measurement mode interface</p> <ul style="list-style-type: none"> <li>a. Apical reference point flash bar</li> <li>b. EAL: Electronic apex locator</li> </ul>
<p>The image shows a black rectangular screen with white text and graphics. On the left, there is a bar chart with vertical lines of varying heights. Below the bar chart, it says '3.0', '2.0', '1.0', 'AP', and '02'. Label 'a' points to the bar chart, 'b' points to '02', and 'c' points to 'AP'.</p>	<p>Canal measurement state interface</p> <ul style="list-style-type: none"> <li>a. Canal length indicator bar</li> <li>b. Indication number</li> </ul> <p>Digital numbers 00-16 do not represent the actual length from the apical foramen. It simply indicates the file progression towards the apex. Number “00” indicate that the file has reached the apical foramen.</p> <ul style="list-style-type: none"> <li>c. Apical foramen.</li> </ul>

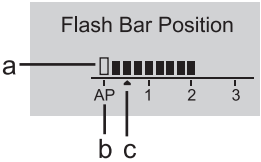

 <p>The diagram shows a horizontal scale labeled 'Flash Bar Position'. A vertical line labeled 'a' is at the left end. A vertical line labeled 'AP' is at the first major tick mark. To the right of 'AP' are three smaller tick marks labeled '1', '2', and '3'. Below the scale, two vertical lines labeled 'b' and 'c' point to the first and second small tick marks respectively.</p>	<p>Apical reference point setting interface</p> <p>a. Apical reference point flash bar</p> <p>b. Apical foramen</p> <p>c. Digital “02” meter reading, very near physiological apical foramen.</p>
---	---

### 3.3 Terms and definition

CW	Clockwise rotation, forward rotation Be applied to rotary file
CCW	Counter clockwise rotation, reverse rotation Be applied to special file, inject calcium hydroxide and other solutions
REC	Reciprocating motion Be applied to reciprocating file, path file and rotary file protection by setting some special angle.
ATR	Adaptive torque reverse Up to setting torque, the motor will move with reciprocating ATR mode ; when torque reduce to normal value, the motor will clockwise rotate.
Forward Angle	Activating in REC and ATR operation mode. ATR mode: adjustable every 10 degrees, adjustment range: 120°-340°. REC mode: adjustable every 10 degrees, adjustment range: 20°-340°.
Reverse Angle	Activating in REC operation mode Adjustable every 10 degrees, adjustment range: 20°-340°.
EAL	Electronic apex locator In the mode, the device will work like a stand-alone apex
AP	Apical foramen.
Apical Action	The file action when file tip reaches the flash bar point.
Flash Bar Position	Shows the point inside the canal where specified apical action is triggered.


Auto Start	The file rotation starts automatically when the file is inserted in the canal.
Apical Slow Down	The file slows down automatically as it approaches the apex. Activating in CW and CCW operation mode.
Operation Mode	5 operation modes for canal shaping and measurement. Such as CW, CCW, REC, ATR and EAL.
Speed	File rotation speed.
Torque (Torque Limit / Trigger Torque)	For CW and CCW modes, the torque value (Torque Limit) that triggers reverse rotation. For ATR mode, the torque value (Trigger Torque) that triggers ATR action.

## 4 Operation instruction

### 4.1 Power on and power off


#### 4.1.1 Starting and stopping of motor handpiece

a) Under the power off state of motor handpiece, press Main button, and then the motor handpiece will enter Standby interface. The interface displays are as follow:



Standby interface

b) Under Standby interface, press Main button, and then the motor handpiece will enter Working interface. The interface displays are as follow:



Working interface

c) Press the Main button again, and then the motor handpiece backs to Standby interface.

d) Hold down the Setting button “P”, then press Main button to turn off motor handpiece. In Standby Interface, the motor handpiece would automatically shut down after 3 minutes without any button-pressing



operation. The motor handpiece will also automatically shut down while it is put into the charging base.

#### 4.2 Selecting customized program sequence number


The motor handpiece has 10 memory programs(M0-M9) and 5 preset programs, press Adjusting button “+”/“-” to change customized program sequence number during standby state.

M0-M9 is a memory program for canal shaping and measurement, every memory program has its own parameters such as Operation mode, speed and torque, all these parameters can be changed.

#### 4.3 Parameter setting

	<p>Before starting of motor handpiece, please check the operation mode is correct. All the parameters must be set according to files, make sure all the parameters are expected before starting of motor handpiece, otherwise has risk of file separate.</p>
	<p>It has 5 operation modes for canal shaping and measurement: CW, CCW, REC, ATR and EAL(See chapter 3.3 Terms and definition to get the explanations of these modes.) Press Setting button “P” once during standby state, press Adjusting button “+”/“-” to select correct Operation mode. CCW mode is used to inject calcium hydroxide and other medicant. When this mode is being used, a double-beep sounds continuously, used for indicating counter clockwise rotation happening.</p>
<p>Repeatedly press Setting button “P” to check all the next level parameters of this operation mode are expected, press Adjusting button “+”/“-” to select if not.</p>	



<p style="text-align: center;">Speed</p> <p style="text-align: center;"><b>250 rpm</b></p>	<p>The speed setting can be adjusted from 100 rpm to 1200 rpm.</p> <p>Press Adjusting button “+”/“-” to increase or decrease speed. Long press to fast increase or fast decrease speed.</p> <p>In ATR mode, speed of 100~500rpm are available.</p> <p>In REC mode, speed of 100~500rpm are available.</p>
<p style="text-align: center;">Torque Limit</p> <p style="text-align: center;"><b>2.0 Ncm</b></p>	<p>The torque setting can be adjusted from 0.4Ncm to 5Ncm.</p> <p>Press Adjusting button “+”/“-” to increase or decrease torque. Long press to fast increase or fast decrease torque.</p> <p>In ATR mode, the Trigger Torque of 0.4Ncm, 0.6Ncm, 0.8Ncm, 1.0Ncm, 1.2Ncm and 1.5Ncm are available.</p> <p>In REC mode, the torque of 2.0Ncm~5.0Ncm are available.</p>
<p style="text-align: center;">Apical Action</p> <p style="text-align: center;"><b>OFF</b></p>	<p>Actions that happen automatically when the file tip reaches the point inside the canal determined by the Flash Bar setting.</p> <p>Benefit from integration of length determination, when the file reaches the reference point, the motor will response according to setting, it can be Reverse , Stop and OFF.</p> <p>Press Adjusting button “+”/“-” to change.</p> <p>OFF: Disable Apical Action function, file rotating as usual even if reach the reference point.</p> <p>Stop: automatically rotation stop when reach the reference point, upward a little bit and will rotate again.</p> <p>Reverse: automatically reverses rotation when reach or pass the reference point, upward a little bit, the rotation direction will change back again.</p>

<p style="text-align: center;">Auto Start</p> <p style="text-align: center;"><b>OFF</b></p>	<p>Rotation starts automatically when the file is inserted into the canal and the canal length indicator bar lights up more than 2 bars.          Press Adjusting button “+”/“-” to change.          OFF: Motor does not start when file is inserted into the canal. The Main button is used to start and stop the motor handpiece.          ON: Motor starts automatically.</p>
<p style="text-align: center;">Flash Bar Position</p>  <p>The diagram shows a horizontal scale with markings for AP, 1, 2, and 3. Above the scale, there are seven vertical bars of varying heights. The first bar is the tallest and is positioned between AP and 1. The other six bars are shorter and decrease in height from left to right, with the last one being the shortest and positioned between 2 and 3.</p>	<p>This is the reference point where various apical actions are triggered.          Press Adjusting button “+”/“-” to select reference point by change the flash bar.          The meter’s 0.5 reading indicates that the file tip is located very near the physiological apical foramen.          The reference point (flash bar) can be set from 2 to AP (Apex) on the meter.</p>
<p style="text-align: center;">Apical Slow Down</p> <p style="text-align: center;"><b>OFF</b></p>	<p>Rotation automatically slows down as the file tip approaches the reference point.          Press Adjusting button “+”/“-” to change.          OFF: Disable Apical Slow Down function.          ON: Rotation automatically slows down as the file tip approaches the reference point.</p>

<p>Forward Angle 30°</p>	<p>Forward Angle: only activating in REC and ATR operation mode.</p>
<p>Reverse Angle 150°</p>	<p>Reverse Angle: only activating in REC operation mode.</p>
<p>M1 F:30° REC R:150°</p>	<p>F: Forward Angle R: Reverse Angle Press Adjusting button “+”/“-” to change angle, adjustable every 10 degrees. It is suggested that the difference between the forward angle and reverse angle should be greater than or equal to 120 degrees, otherwise, root canals cannot be prepared effectively. Forward Angle&lt;Reverse Angle, such as F: 30°/ R: 150°, effective cutting angle is Reverse Angle, it is suitable for used the reciprocating files likes DENTSPLY WAVEONE or WOODPECKER W3-ONE. Forward Angle&gt;Reverse Angle, such as F: 180°/ R: 30°, effective cutting angle is Forward Angle, it is suitable for used the reciprocating files likes SENDONELINE S1. Remarks: only 120°~340° forward angles are available in ATR mode.</p>



#### 4.4 Preset program selection

<p>W3-Pro 350rpm 25/06 CW 2.0Ncm</p>	<p>For convenience, we preset some common file system. Press Adjusting button “+”/“-” to switch to preset program(M0-M9, preset program 1-5 ), the interface will show as left.</p>
<p>W3-Pro W3-ONE W3-Single W2-Plus &gt;</p>	<p>Long press Setting button “P” to entry preset program during standby state, the interface will show as left. Press Adjusting button “+”/“-” to select file system.</p>

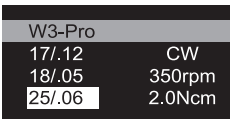	<p>After select file system, press Setting button “P” to entry select file number, press Adjusting button “+”/“-” to select file number, then press Main button to confirm.</p>
	<p>The parameters of "W3-Pro" can also be changed make it different from default setting. If want to change back to default setting, long press Setting button “P” to entry preset program during standby state, select "W3-Pro" and press "Main" button to confirm, the default setting will be reloaded, Turn off the motor handpiece and then power on, the preset program can also restore the default setting. Changing the preset program default setting is not recommended, otherwise has risk of file separate.</p>

#### 4.5 Handpiece functions setting


With the motor handpiece turned off, hold down the Setting button “P” and press Main button to entry handpiece functions setting, press Setting button “P” till target setting, press Adjusting button “+”/“-” to adjust, then press Main button to confirm.

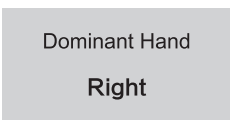	<p>With the motor handpiece turned off, hold down the Setting button “P” and press Main button to entry handpiece functions setting, the software version number will appear on the display screen.</p>
	<p>After 3 seconds of displaying the version number on the screen, the "Dominant Hand" can be change, press Adjusting button “+”/“-” to adjust, then press to "Main" button to confirm. The right hand and the left hand can be set.</p>

<p style="text-align: center;">Calibration <b>OFF</b></p>	<p>Press Setting button “P” again, the "Calibration Hand" can be change, press Adjusting button “+”/“-” to select “ON”, then press to "Main" button to calibration.</p> <p>Before calibrating, making sure the original contra angle is installed, and do not install the file. The torque will not correct if calibration without original contra angle or any load on contra angle chuck, and has risk of file separate. After replacement of contra angle, the contra angle shall be calibrated before use.</p>
<p style="text-align: center;">Beeper Volume <b>Vol.3</b></p>	<p>Press Setting button “P” again, the "Beeper Volume" can be change, press Adjusting button “+”/“-” to adjust, then press to "Main" button to confirm.</p> <p>The "Beeper Volume" can be set from 0-3. Vol.0: Mute.</p>
<p style="text-align: center;">Restore Defaults <b>OFF</b></p>	<p>Press Setting button “P” again, the "Restore Defaults" can be change, press Adjusting button “+”/“-” to select “ON”, then press to "Main" button to restore defaults.</p>

#### 4.6 Protective function of automatic reverse

During operation, if the load value exceeds the preset torque value, the file rotation mode will automatically change to Reverse Mode. And the file would return to normal rotation mode when the load is below the preset torque value again.

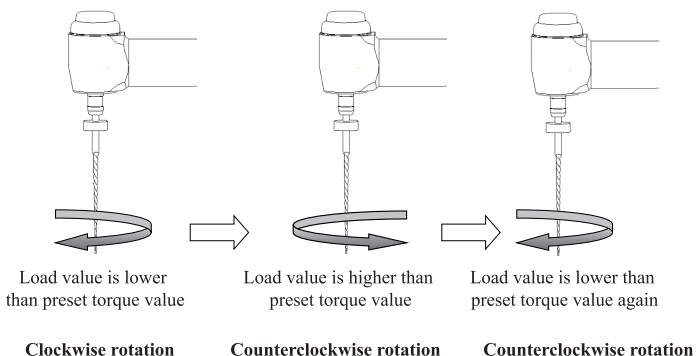



### **Cautions:**

1. Protective function of automatic reverse is **ONLY** suitable for CW mode.

2. In REC mode, when the load value is higher than preset torque value, if Forward angle is greater than Reverse angle, the file rotation automatically change to reverse rotation, and if Forward angle is less than Reverse angle, the file rotation automatically change to forward rotation.


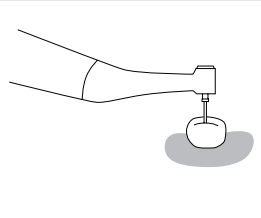
3. This function is forbidden under CCW mode, ATR mode.



4. When the motor handpiece battery indicator indicates a low battery capacity, the low battery capacity is insufficient to support the motor handpiece to reach the limit torque value, that is, the auto-reverse function will not work properly. Please charge it in time.

5. If the motor handpiece is under load all the time, the machine may stop automatically as a result of overheat protection. If it happens, turn off the motor handpiece for a while until the temperature drops.

### 4.7 Motor operation

Please set operation mode, torque and speed as per the recommended specifications of file manufacturer.

 	<p><b>Motor alone mode</b></p> <p>When using as motor alone mode, the torque bar will show on the screen.</p> <p>(more information about torque bar, please see chapter 3. 2 Screen display )</p>
---	---

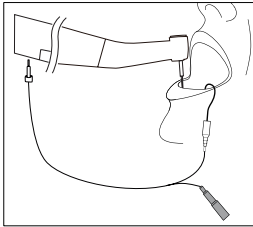



### Motor combined canal measurement function mode

When using motor combined canal measurement function, the measuring wire must be connecting with motor handpiece by USB socket, and white socket connects with patient's lip by lip hook, keep the black socket idle.

The canal length indicator bar will show on the screen (more information about canal length indicator bar, please see chapter 3.2 Screen display)


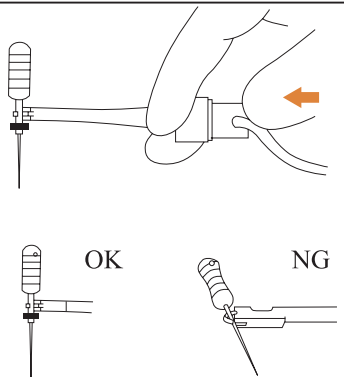
Setting parameters of automatic functions as needed, such as Apical Action, Auto Start, etc(more information about automatic functions, please see chapter 4.3 Parameter setting).

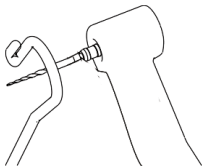






### Connection testing




Strongly recommend check the connection testing every time before use. Touch the lip hook with the file in the contra angle and check that all the bars on the meter on the screen light up, and the motor should be reversed continuously, otherwise, the measuring wire or contra angle should be replace.

## 4.8 Canal measurement operation

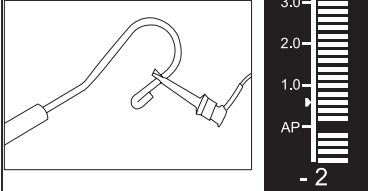	<p>When using as alone apex locator mode. We suggest put the motor handpiece on the charging base to get better visual angle.</p> <p>Press Setting button “P” once during standby state, press Adjusting button “+”/“-” to select EAL Operation mode, then press Main button to confirm. (See chapter 3.3 Terms and definition to get the explanations of Operation modes.)</p> <p>The measuring wire must be connecting with motor handpiece by USB socket, white socket connects with patient’s lip by lip hook, and black socket connect with file clip.</p> <p>The canal length indicator bar will show on the screen (more information about canal length indicator bar, please see chapter 3. 2 Screen display).</p>
	<p>The file clip must hold the file correctly. Push the button on the file clip with your thumb in the direction shown by the arrow. Clip the holder onto the metal upper part of the file and then release the button.</p>


	<p><b>Connection testing</b></p> <p>Strongly recommend check the connection testing every time before use. Clip the holder onto lip hook and check that all the bars on the meter on the screen light up, otherwise, the measuring wire or file clip should be replace.</p>
<p>Root canals not suitable for canal measurement</p> <p>Accurate measurement cannot be obtained if the root canal conditions shown below.</p>	
	<p>Root canal with a large apical foramen</p> <p>Root canal that has an exceptionally large apical foramen due to a lesion or incomplete development cannot be accurately measured. The results may show shorter measurement than the actual length.</p>

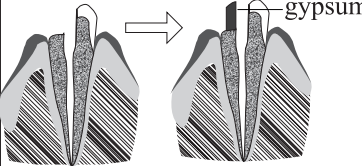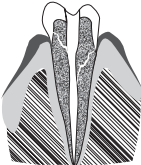	<p>Root canal with blood overflowing from the opening</p> <p>If blood overflows from the opening of the root canal and contacts the gums, this will result in electrical leakage and an accurate measurement cannot be obtained. Wait for bleeding to stop completely. Clean the inside and opening of the canal thoroughly to get rid of all blood, and then make a measurement.</p> <p>Root canal with a chemical solution overflowing from the opening</p> <p>An accurate measurement cannot be obtained if some chemical solution is overflowing from the canal opening. In this case, clean the canal and its opening.</p> <p>It is important to get rid of any solution overflowing the opening.</p>
	<p>Broken crown</p> <p>If the crown is broken and a section of the gingival tissue intrudes into the cavity surrounding the canal opening, contact between the gingival tissue and the file will result in electrical leakage and an accurate measurement cannot be obtained. In this case, build up the tooth with a suitable material to insulate the gingival tissue.</p>
	<p>Fractured tooth</p> <p>Leakage through a branch canal</p> <p>Fractured tooth will cause electrical leakage and an accurate measurement cannot be obtained.</p> <p>A branch canal will also cause electrical leakage.</p>

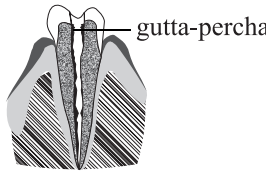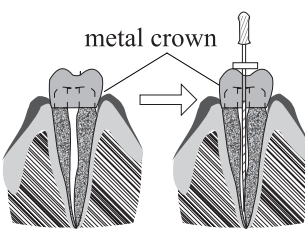	<p>Re-treatment of a root filled with gutta-percha</p> <p>The gutta-percha must be completely removed to eliminate its insulating effect. After removing the gutta-percha, pass a small file all the way through the apical foramen and then put a little saline in the canal, but do not let it overflow the canal opening.</p>
	<p>Crown or metal prosthesis touching gingival tissue</p> <p>Accurate measurement cannot be obtained if the file touches a metal prosthesis that is touching gingival tissue. In this case, widen the opening at the top of the crown so that the file will not touch the metal prosthesis before taking a measurement.</p>
 <p>Too dry</p>	<p>Extremely dry canal</p> <p>If the canal is extremely dry, the meter may not move until it is quite close to the apex. In this case, try moistening the canal with saline.</p>

**Difference measuring result between apex locator reading and radiography**

Sometimes the reading of apex locator and the X-ray image will not correspond. This does not mean that the apex locator is not working properly or that the X-ray exposure is a failure. An X-ray image might not show the apex correctly depending on the angle of the X-ray beam, and the location of the apex might seem to be other than it really is.

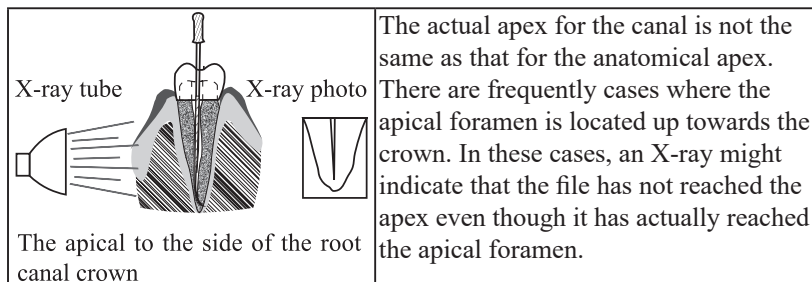

#### 4.9 Battery Charging

The motor handpiece has built-in rechargeable lithium battery.

When charging the battery, leave approximately 10cm around the charging base for easy access to inlet and the power cord.

Connect the power adapter with the charging base. Confirm that it is well connected, and then place the motor handpiece into the charging base. If the indicator light on charging base turns blue, it indicates that it is charging. If the indicator light on base turns green, it indicates that the battery capacity is enough, and there is no need to charge.

After charging, please unplug the power adapter.

#### 4.10 Replacing Battery

Replace the battery if it seems to be running out of power sooner than it should. Please use the original lithium battery.

a) Turn the motor handpiece power off.

b) Use tweezers etc. to open the rubber cover and then remove the screw.

c) Remove the battery cover.

d) Remove the old battery and disconnect the connector.

e) Connect the new battery and put it in the motor handpiece.

f) Replace the cover and its screw.

It is recommended to contact local distributors or manufacturer to replace the battery.

#### 4.11 Oiling of contra angle

Only the original oil injection nozzle can be used for oiling of contra angle. The contra angle needs to be lubricated after cleaning and disinfection, but before sterilization.

1. Firstly, screw the injecting nozzle into jet of oil bottle. (Around 1 to 3 circles)

2. Next, plug the nozzle into the end part of contra angle, and then

grease the contra angle for 2-3s till the oil flow out of contra angle head part.

3. Vertically place the end part of contra angle more than 30 minutes to let go the redundant oil under gravity.


**⚠ Warnings**

Motor handpiece cannot be filled with oil.

**⚠ Cautions**

a: To avoid the contra angle from flying out for the pressure, use hand to safely hold the contra angle while greasing.

b: Do not use a swirling nozzle. Swing nozzle can only be used for injection of gas, not for oiling.

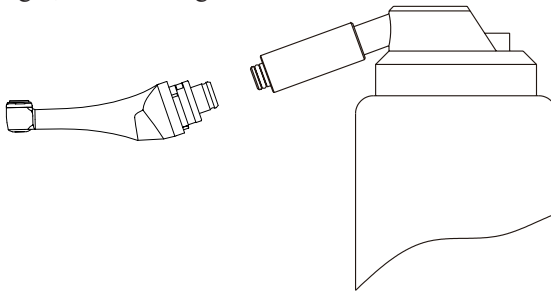

## 5 Troubleshooting

Failure	Possible cause	Solutions
The motor handpiece does not rotate.	Chose EAL mode, EAL mode is only for canal measurement.	Changing to CW, CCW, REC or ATR mode.
There is continuous beep sounds after starting the motor handpiece.	The continuous beep sound is indicating that the motor handpiece is under CCW mode.	Stop the motor handpiece and change the operating mode to CW Mode.
Contra angle calibration failure	Calibration failure caused by strong resistance of contra angle	Clean the contra angle, and recalibrate after oil injection.
Motor handpiece heating	Under Reciprocating Motion Mode, the using time is too long.	Stop use. Use after the temperature of motor handpiece drops.



The time of endurance becomes shorter after charging.	Battery capacity becomes smaller.	Please contact local distributor or manufacturer.
No sound	Beeper Volume set to 0. Vol.0: Mute.	Set Beeper Volume to 1,2,3.
The continuously rotating file is stuck at the root canal.	Incorrect specification setting. Too high load torque of file.	Choose CCW Mode, start the motor handpiece, and take the file out.

## **6 Cleaning, Disinfection and Sterilization**

### 6.1 Foreword

For hygiene and sanitary safety purposes, the contra angle, the lip hook, the file clip, the protective silicon cover and the touch probe must be cleaned, disinfected and sterilized before each usage to prevent any contamination. This concerns the first use, as well as all subsequent uses.

### 6.2 General recommendations

6.2.1 Use only a disinfecting solution which is approved for its efficacy (VAH/DGHM-listing, CE marking, FDA and Health Canada approval) and in accordance with the DFU of the disinfecting solution manufacturer.

6.2.3 Do not place the contra angle in a disinfectant solution or in an ultrasonic bath.

6.2.4 Do not use chloride detergent materials.

6.2.5 Do not use bleach or chloride disinfectant materials.

6.2.6 For your own safety, please wear personal protective equipment (gloves, glasses, mask).

6.2.7 The user is responsible for the sterility of the product for the first cycle and each further usage as well as for the usage of damaged or dirty instruments where applicable after sterility.

6.2.8 The water quality has to be convenient to the local regulations especially for the last rinsing step or with a washer-disinfector.

6.2.9 Do not sterilize the motor handpiece, the AC adapter or the base. After each use, all the objects that were in contact with infectious agents should be cleaned using towels impregnated with a disinfecting and detergent solution (a bactericidal, fungicidal and aldehyde free solution) approved by VAH/DGHM-listing, CE marking, FDA and

Health Canada.

6.2.10 To sterilize the endodontic files, refer to the manufacturer's instructions for use.

6.2.11 The contra angle needs to be lubricated after cleaning and disinfection, but before sterilization.

### 6.3 Step-by-Step Procedure

#	Operation	Operating Mode	Warning
1	Preparation	Remove accessories (contra angle, lip hook, file clip, touch probe, protective silicon cover) from handpiece and base.	
2	Automated Cleaning with washer-disinfector	Put the accessories (contra angle, lip hook, file clip, touch probe, protective silicon cover) into the washer disinfector (Ao value >3000 or, at least 5 min at 90°C/194°F)	<ul style="list-style-type: none"><li>- Avoid any contact between the contra angle and any instruments, kits, supports or container.</li><li>- Follow instructions and observe concentrations given by the manufacturer (see also general recommendations).</li><li>- Use only approved washer-disinfector according to EN ISO 15883, maintain and calibrate it regularly.</li><li>- Make sure accessories (contra angle, lip hook, file clip and touch probe, protective silicon cover) are dry before moving to the next step.</li></ul>

#	Operation	Operating Mode	Warning
3	Inspection	Inspect the accessories (contra angle, lip hook, file clip, touch probe, protective silicon cover) and sort out those with defects.	<ul style="list-style-type: none"> <li>- Dirty accessories (contra angle, lip hook, file clip, touch probe, protective silicon cover) must be cleaned and disinfected again.</li> <li>- Lubricate the contra angle with an adequate spray before packaging.</li> </ul>
4	Packaging	Pack the accessories (contra angle, lip hook, file clip, touch probe, protective silicon cover) in "Sterilization pouches".	<ul style="list-style-type: none"> <li>- Check the validity period of the pouch given by the manufacturer to determine the shelf life.</li> <li>- Use packaging which is resistant to a temperature up to 141°C (286°F) and in accordance with EN ISO 11607.</li> </ul>
5	Sterilization	Steam sterilization at 134°C, 2.0bar-2.3bar(0.20Mpa-0.23MPa), for 4 minutes.	<ul style="list-style-type: none"> <li>- Use only autoclaves that are matching the requirements of EN 13060, EN 285.</li> <li>- Use a validated sterilization procedure according to ISO 17665.</li> <li>- Respect the maintenance procedure of the autoclave device given by the manufacturer.</li> <li>- Use only this recommended sterilization procedure.</li> <li>- Control the efficiency (packaging integrity, no humidity, color change of sterilization indicators, physico-chemical integrators, digital records of cycles parameters).</li> <li>- Maintain traceability of procedure records.</li> </ul>

#	Operation	Operating Mode	Warning
6	Storage	Keep the accessories (contra angle, lip hook, file clip, touch probe, protective silicon cover) in sterilization packaging in a dry and clean environment.	- Sterility cannot be guaranteed if packaging is open, damaged or wet. - Check the packaging and the contra angle before using it (packaging integrity, no humidity and validity period).

## **7 Storage, maintenance and transportation**

### 7.1 Storage

7.1.1 This equipment should be stored in a room where the relative humidity is 10% ~ 93%, atmospheric pressure is 70kPa to 106kPa, and the temperature is -20°C ~ +55°C.

7.1.2 Avoid the storage in a too hot condition. High temperature will shorten the life of electronic components, damage battery, reshape or melt some plastic.

7.1.3 Avoid the storage in a too cold condition. Otherwise, when the temperature of the equipment increases to a normal level, there will be dew that will possibly damage PCB board.

### 7.2 Maintenance

7.2.1 This device do not include accessories for repair usage, the repair should be carried out by authorized person or authorized after service center.

7.2.2 Keep the equipment in a dry storage condition.

7.2.3 Do not throw, beat or shock the equipment.

7.2.4 Do not smear the equipment with pigments.

7.2.5 Calibration is recommended when using a new/other contra angle or after an extend period of operation, as the running properties can change with usage, cleaning and sterilization.

7.2.6 Replace the battery if it seems to be running out of power sooner than it should.

## 7.3 Transportation

7.3.1 Excessive impact and shake should be prevented in transportation. Lay it carefully and lightly and don't invert it.

7.3.2 Don't put it together with dangerous goods during transportation.

7.3.3 Avoid solarization and getting wet in rain and snow during transportation.
















## 8 Environmental protection

Please dispose according to the local laws.

## 9 After service

From the date this equipment has been sold, based on the warranty card, we will repair this equipment free of charge if there are quality problems. Please refer to the warranty card for the warranty period.

## 10 Symbol instruction

	Refer to instruction manual/booklet		Serial number
	Date of manufacture		Manufacturer
	Type B applied part		Class II equipment
IPX0	Ordinary equipment		Recovery
	Used indoor only		Keep dry
	Handle with care		Appliance compliance WEEE directive
	Humidity limitation		Temperature limitation
	Atmospheric pressure for storage		
	Consult the accompanying documents		

## 11 Statement

All rights of modifying the product are reserved to the manufacturer without further notice. The pictures are only for reference. The final interpretation rights belong to GUILIN WOODPECKER MEDICAL INSTRUMENT CO., LTD. The industrial design, inner structure, etc, have claimed for several patents by WOODPECKER, any copy or fake product must undertake legal responsibilities.

## 12 EMC-Declaration of conformity

The device has been tested and homologated in accordance with EN 60601-1-2 for EMC. This does not guarantee in any way that this device will not be effected by electromagnetic interference Avoid using the device in high electromagnetic environment.

### Technical Description Concerning Electromagnetic Emission

**Table 1: Declaration - electromagnetic emissions**

<b>Guidance and manufacturer's declaration - electromagnetic emissions</b>		
The model Ai-Motor、MotoPex is intended for use in the electromagnetic environment specified below. The customer or the user of the model Ai-Motor、MotoPex should assure that it is used in such an environment.		
Emissions test	Compliance	Electromagnetic environment - guidance
RF emissions CISPR 11	Group 1	The model Ai-Motor、MotoPex uses RF energy only for its internal function. Therefore, its RF emissions are very low and are not likely to cause any interference in nearby electronic equipment.
RF emissions CISPR11	Class B	The model Ai-Motor、MotoPex is suitable for used in all establishments, including domestic establishments and those directly connected to the public low-voltage power supply network that supplies buildings used for domestic purposes.
Harmonic emissions IEC 61000-3-2	Class A	
Voltage fluctuations / flicker emissions IEC 61000-3-3	Complies	

## Technical Description Concerning Electromagnetic Immunity

**Table 2: Guidance & Declaration - electromagnetic immunity**

<b>Guidance &amp; Declaration — electromagnetic immunity</b>			
The model Ai-Motor、MotoPex is intended for use in the electromagnetic environment specified below. The customer or the user of the model Ai-Motor、MotoPex should assure that It is used in such an environment.			
Immunity test	IEC 60601 test level	Compliance level	Electromagnetic environment - guidance
Electrostatic discharge (ESD) IEC 61000-4-2	±8kV contact ±2, ±4, ±8, ±15kV air	±8kV contact ±2, ±4, ±8, ±15kV air	Floors should be wood, concrete or ceramic tile. If floors are covered with synthetic material, the relative humidity should be at least 30 %.
Electrical fast transient/burst IEC 61000-4-4	±2kV for power supply lines ±1kV for Input/output lines	±2kV for power supply lines	Mains power quality should be that of a typical commercial or hospital environment.
Surge IEC 61000-4-5	±0.5, ±1kV line to line ±0.5, ±1, ±2kV line to earth	±0.5, ±1kV line to line ±0.5, ±1, ±2kV line to earth	Mains power quality should be that of a typical commercial or hospital environment.
Voltage dips, short interruptions and voltage variations on power supply input lines IEC 61000-4-11	<5 % UT (>95% dip in UT.) for 0.5 cycle <5 % UT (>95% dip in UT.) for 1 cycle 70% UT (30% dip in UT) for 25 cycles <5% UT (>95 % dip in UT) for 250 cycles	<5 % UT (>95% dip in UT.) for 0.5 cycle <5 % UT (>95% dip in UT.) for 1 cycle 70% UT (30% dip in UT) for 25 cycles <5% UT (>95 % dip in UT) for 250 cycles	Mains power quality should be that of a typical commercial or hospital environment. If the user of the models Ai-Motor、MotoPex requires continued operation during power mains interruptions, it is recommended that the models Ai-Motor、MotoPex be powered from an uninterruptible power supply or a battery.

Power frequency (50/60 Hz) magnetic field IEC 61000-4-8	30A/m	30A/m	Power frequency magnetic fields should be at levels characteristic of a typical location in a typical commercial or hospital environment.
NOTE UT is the a.c. mains voltage prior to application of the test level.			

**Table 3: Guidance & Declaration - electromagnetic immunity concerning Conducted RF & Radiated RF**

<b>Guidance &amp; Declaration - Electromagnetic immunity</b>			
The model Ai-Motor、MotoPex is intended for use in the electromagnetic environment specified below. The customer or the user of the models Ai-Motor、MotoPex should assure that it is used in such an environment.			
Immunity test	IEC 60601 test level	Compliance level	Electromagnetic environment - guidance



<p>Conducted RF IEC 61000-4-6 Conducted RF IEC 61000-4-6 Radiated RF IEC 61000-4-3</p>	<p>3 Vrms 150 kHz to 80 MHz 6 Vrms ISM frequency band 3 V/m 80 MHz to 2.7 GHz</p>	<p>3V 6V 3V/m</p>	<p>Portable and mobile RF communications equipment should be used no closer to any part of the models Ai-Motor, MotoPex, including cables, than the recommended separation distance calculated from the equation applicable to the frequency of the transmitter. Recommended separation distance <math>d=1.2 \times P^{1/2}</math> <math>d=2 \times P^{1/2}</math> <math>d=1.2 \times P^{1/2}</math> 80 MHz to 800 MHz <math>d=2.3 \times P^{1/2}</math> 800 MHz to 2.7 GHz where P is the maximum output power rating of the transmitter In watts (W) according to the transmitter manufacturer and d Is the recommended separation distance in meters (m). Field strengths from fixed RF transmitters, as determined by an electromagnetic site survey, a should be less than the compliance level in each frequency range. b Interference may occur In the vicinity of equipment marked with the following symbol:</p>
<p>NOTE 1 At 80 MHz end 800 MHz. the higher frequency range applies. NOTE 2 These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.</p>			

a Field strengths from fixed transmitters, such as base stations for radio (cellular/cordless) telephones and land mobile radios, amateur radio, AM and FM radio broadcast and TV broadcast cannot be predicted theoretically with accuracy. To assess the electromagnetic environment due to fixed RF transmitters, an electromagnetic site survey should be considered. If the measured field strength in the location in which the model Ai-Motor、 MotoPex is used exceeds the applicable RF compliance level above, the model Ai-Motor、 MotoPex should be observed to verify normal operation. If abnormal performance is observed, additional measures may be necessary, such as reorienting or relocating the model Ai-Motor、 MotoPex.

b Over the frequency range 150 kHz to 80 MHz, field strengths should be less than 3V/m.

**Table 4: Recommended separation distances between portable and mobile RF communications equipment and the model Ai-Motor、 MotoPex**

<b>Recommended separation distances between portable and mobile RF communications equipment and the model Ai-Motor、 MotoPex</b>			
The model Ai-Motor、 MotoPex is intended for use in electromagnetic environment in which radiated RF disturbances is controlled. The customer or the user of the model Ai-Motor、 MotoPex can help prevent electromagnetic interference by maintaining a minimum distance between portable and mobile RF communications equipment (transmitters) and the model Ai-Motor、 MotoPex as recommended below, according to the maximum output power of the communications equipment.			
Rated maximum output power of transmitter W	Separation distance according to frequency of transmitter m		
	150kHz to 80MHz $d=1.2 \times P^{1/2}$	80MHz to 800MHz $d=1.2 \times P^{1/2}$	800MHz to 2,7GHz $d=2.3 \times P^{1/2}$
0,01	0.12	0.12	0.23
0,1	0.38	0.38	0.73
1	1.2	1.2	2.3
10	3.8	3.8	7.3
100	12	12	23

For transmitters rated at a maximum output power not listed above, the recommended separation distance  $d$  in meters (m) can be estimated using the equation applicable to the frequency of the transmitter, where  $P$  is the maximum output power rating of the transmitter in watts (W) accordable to the transmitter manufacturer.

NOTE 1 At 80 MHz and 800 MHz, the separation distance for the higher frequency range applies.

NOTE 2 These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.

Scan and Login website  
for more information



Guilin Woodpecker Medical Instrument Co., Ltd.  
Information Industrial Park, Guilin National High-Tech  
Zone, Guilin, Guangxi, 541004 P. R. China

Tel:

Europe Sales Dept.: +86-773-5873196, +86-773-2125222

North America, South America &

Oceania Sales Dept.: +86-773-5873198, +86-773-2125123

Asia & Africa Sales Dept.: +86-773-5855350, +86-773-2125896

Fax: +86-773-5822450

E-mail: [woodpecker@glwoodpecker.com](mailto:woodpecker@glwoodpecker.com), [sales@glwoodpecker.com](mailto:sales@glwoodpecker.com)

Website: <http://www.glwoodpecker.com>

ZMN/WI-09-475 V1.0-20190413

<https://stomshop.pro>